ENVIROTUBES®

A Geotextile Tube

A Step-By-Step for **Tube Repair**

Fabric Repair

Step 1:

Showing damaged tube fabric and patches - one for inside and one for outside.

Use 1/2" exterior plywood



Step 2:

Inserting inside patch.

Make patches large enough for good overlap.





Step 3:

Turning inside patch to evenly cover damage with even overlap.



Step 4:

Showing inside of patch.

Fabric Repair

Step 5:

Showing outside of patch.



Step 6:

Apply glue.





Step 7:

Applying glue.



Step 8:

Place the outside patch over the inside patch. Needs good alignment.

Fabric Repair

Step 9:

Placing the outside patch.


Press firmly.



Step 10:

Screw patches together. Use lots of all-thread screws.



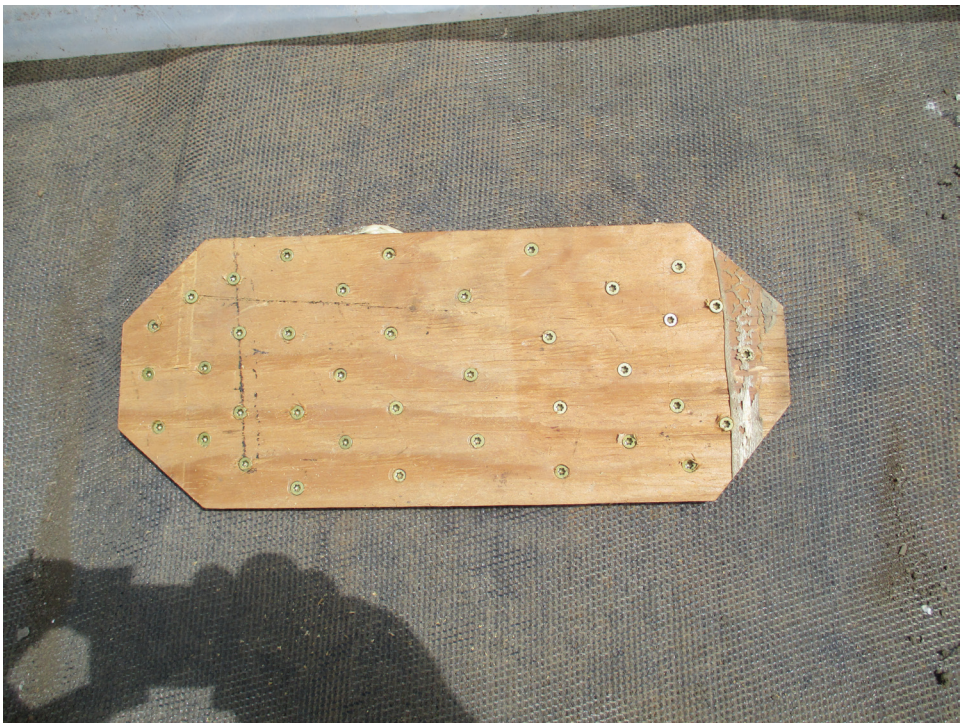

Step 11:

Finished patch. Preferably dry overnight.

NOTES:

Seam Repair

Step 1:

Showing failed seam.



Step 2:

Make an opening for patch next to seam if needed to insert inner full-sized patch.





Step 3:

Insert the full-sized inside patch.

Use 1/2" exterior plywood.



Step 4:

Showing patch inside.

Seam Repair

Step 5:

Apply glue to an outside 1/2 patch.



Step 6:

Placing the outside 1/2 patch.





Step 7:

Screw the outside 1/2 patch. Use lots of all-thread screws.



Step 8:

Showing finished patch with both 1/2 patches screwed to the inside full patch. Preferably dry overnight.

For Technical Concerns:

Dean Wickoren
913-221-5345
wickorend@gmail.com

Industrial Fabrics, Inc.
510 O' Neal Lane Extension
Baton Rouge, LA 70819

225 273 9600 phone
225 273 0440 fax
800 848 4500

www.envirotubes.com

INDUSTRIAL FABRICS, INC.
since 1981